

# Mini Bluetooth Party Speaker



11919

# Front Panel Controls and Connections



1. **MIC VOLUME:** Controls the volume level of the microphone input.
2. **AUX VOLUME:** Controls the volume level of the line level AUX input as well as the wireless Bluetooth input.
3. **MASTER VOLUME:** Controls the overall volume level. Note that the MIC and AUX inputs are simultaneously active and are mixed together into the single master output.
4. **Bluetooth LED:** Indicates the status of the Bluetooth connection, as follows:
  - a. **OFF:** No connection
  - b. **ON:** Connection OK
  - c. **Flashing:** In pairing mode
5. **Bluetooth Button:** Used to open or close a Bluetooth connection or to put the system into Bluetooth pairing mode.
  - a. **Pairing:** Press and hold the Bluetooth Button until the Bluetooth LED begins to flash. The system is now in pairing mode. In the list of available Bluetooth devices, select the **MP-Mini Party Spk** entry. If you are asked for a PIN or password, enter 0000.
  - b. **Open:** If you have a device that was last paired with the speaker, press and hold the Bluetooth Button for about 3 seconds to open/reactivate the connection
  - c. **Close:** You can close an active connection by pressing and holding the Bluetooth Button for about 3 seconds.
6. **CHARGE:** Indicates that the internal battery is being charged. **The unit must be turned on in order to charge the battery.**

7. **BATTERY LEVEL:** Indicates the current charge level of the built-in battery. If the red LED is lit, the battery should be charged immediately. Failure to charge the battery when it is depleted can cause damage to the battery and/or speaker system.
8. **MIC:** 1/4" TRS balanced microphone level input.
9. **AUX INPUT:** Line-level auxiliary input using RCA stereo pair.
10. **USB Charge:** USB port for charging mobile devices. 5 VDC, 500mA output.
11. **DC IN:** DC power socket for connecting the included AC adapter. Requires a 15 VDC input with either 2A (11919) or 1A (11922) current level. The DC connector is center/tip positive.
12. **Power Switch:** Powers the system on/off.

<b>Specifications</b>	
<b>Model</b>	11919
<b>Driver</b>	4-ohm 6.5" full-range driver
<b>Amplifier Power</b>	13 watts @ 1% THD
<b>Frequency Response (AUX)</b>	65Hz ~ 16kHz
<b>Sensitivity (AUX)</b>	-22dB
<b>Signal-to-Noise Ratio</b>	> 90dB
<b>Battery</b>	12V, 2.6Ah
<b>Power Adapter</b>	15 VDC, 2000mA, center/tip positive
<b>Microphone Input</b>	1/4" (6.35mm) TRS balanced
<b>AUX Input</b>	Stereo RCA (unbalanced)
<b>Supported Bluetooth Profile</b>	A2DP
<b>Bluetooth ID</b>	MP-Mini Party Spk
<b>Time for Full Charge</b>	about 8 hours
<b>Playback Time</b>	up to 4 hours
<b>Dimensions</b>	(H X W X D) 11.0" X 9.1 " X 8.3"
<b>Weight</b>	10.6 lbs. (4.8kg)

## **FCC Compliance Statement:**

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

**Modifications:** Any modifications made to this device that are not approved by Monoprice, Inc. may void the authority granted to the user by the FCC to operate this equipment.

## **CE Compliance Statement:**

This product is in compliance with CE directives and bears the CE mark. For detailed information on specific directives please contact Customer Service or sales office or distributor.

## **WEEE Directive Compliance Statement:**



This symbol on the product or on its packaging indicates that the product must not be disposed of with normal household waste. Instead, it is your responsibility to dispose of your waste equipment by arranging to return it to a designated collection point for the recycling of waste electrical and electronic equipment. By separating and recycling your waste equipment at the time of disposal you will help to conserve natural resources and ensure that the equipment is recycled in a manner that protects human health and the environment.