


Desktop Station

Quick Setup Guide

Features

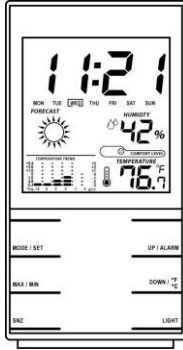

- Forecast Indicator
- Temperature and Humidity with Min / Max
- Comfort Indicator
- Temperature History
- Time and Date
- Day of Week
- Alarm with Snooze
- Backlit LCD Display

Configuration



To set the time: 11:21

- Press and hold the MODE/SET button for 3 seconds. Set the HOUR by pressing the UP/ALARM or DOWN/°F °C buttons.
- Press the MODE/SET button again. Set the MINUTES by pressing the UP/ALARM or DOWN/°F °C buttons.

To set the Date: 121

- Press the MODE/SET button to view the date and month.
- Press and hold the MODE/SET button for 3 seconds until the YEAR appears and is blinking.
- Set the YEAR by pressing the UP/ALARM or DOWN/°F °C buttons.
- Press the MODE/SET button again, and the MONTH will start blinking.
- Set the MONTH by pressing the UP/ALARM or DOWN/°F °C buttons.
- Press the MODE/SET button again and the DAY will start blinking.
- Set the DAY by pressing the UP/ALARM or DOWN/°F °C.

Note: The day of the week is automatically set.

To set the Alarm:

- Press the MODE/SET button until the alarm time is displayed in the bottom segment of the LCD (indicated by the alarm bell icon in the upper left corner of the time section).

- Press and hold the MODE/SET button for 3 seconds until the ALARM HOUR is blinking. Set the ALARM HOUR by pressing the UP/ALARM or DOWN/°F °C buttons.
- Press the MODE/SET button again. Set the ALARM MINUTES by pressing the UP/ALARM or DOWN/°F °C buttons.

Operation

IMPORTANT: Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (Ni-Cad) batteries.

Function Buttons

MODE/SET BUTTON:



Press the MODE/SET button one time to view the date and month. Press the MODE/SET button twice to view the current alarm time.

Pressing the MODE/SET button again will return to the default view of the current time.

MAX/MIN BUTTON:




Press the MAX/MIN button once to view the MAXIMUM temperature and humidity.

Press the MAX/MIN button again to view the MINIMUM temperature and humidity.

Note: If the MAX/MIN button is not pressed for approximately 8 seconds after pressing it once, it will return to the current temperature and humidity. To display the MINIMUM temp and humidity, it is necessary to press the MAX/MIN button twice within roughly 5 seconds.

SNZ (snooze) BUTTON:

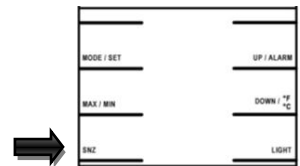

Press the SNZ button once during normal operation to turn the LCD backlight on. Press the SNZ button while the alarm is sounding to activate the snooze mode. The LCD backlight will come on and the alarm will be silenced for roughly 8 min, after which the alarm will sound again.

LIGHT BUTTON:



Press the LIGHT button to activate the LCD backlight.

The light stays on for approximately 8 seconds.

Other Functions

To view the date:

While viewing the time, press the MODE/SET button and the date and month will be displayed.

To view the alarm time:

While viewing the TIME, press the MODE/SET button (the date and month will be displayed), then press the MODE/SET button again. The currently set alarm time is displayed.

Turning the Alarm ON/OFF:

To turn the alarm on or off, just press the UP button once. When the alarm is ON, a little alarm bell icon is displayed in the upper left corner of the time section. If the little alarm icon is not showing, the alarm is turned OFF.

12/24 Hour Format:

With the time displayed normally, press the UP/ALARM button and hold it pressed for 3 seconds. This will switch the time format from 12 to 24 hour format and back.

Note: The default mode is 12 hour time.

Fahrenheit / Celsius:

To change the temperature display between Celsius and Fahrenheit, press the DOWN/°F °C button.

Warranty

This La Crosse Technology product is warranted for two years from the date of consumer purchase against defects in material and workmanship. During this period such defects will be repaired, or the product will be replaced at La Crosse Technology's option, without charge. This warranty does not cover damage caused by misuse or negligence. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OR FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO THE PERIOD ENDING ONE YEAR FROM THE DATE OF PURCHASE. Some states do not allow limitations on how long an implied warranty last so the above limitation may not apply to you. This warranty gives you specific legal rights and you may have other rights, which vary from state to state.

If your clock isn't working, send it with a letter explaining the problem and \$5.00 for postage and handling to:

La Crosse Technology Warranty Dept.
2817 Losey Blvd. S
La Crosse, WI 54601

For customer support on the web:
www.lacrossetechnology.com/30220

All rights reserved. This handbook must not be reproduced in any form, even in excerpts, or duplicated or processed using electronic, mechanical or chemical procedures without written permission of the publisher. This handbook may contain mistakes and printing errors. The information in this handbook is regularly checked and corrections made in the next issue. We accept no liability for technical mistakes or printing errors, or their consequences. All trademarks and patents are acknowledged.