

5.3 IR REMOTE

TV Mode Button
Press to control TV functions

SAT Mode Button
Press to control satellite receiver

TV/Video Button
Press to switch through TV Inputs

Menu Button
Press to view the Main Menu

Volume Button
Press to lower or raise the TV sound

Mute Button
Turns TV sound On/Off

Left/Themes Button
Moves cursor to the Left or views the Themes Menu when in Satellite Mode

Recall Button
Returns to previous channel

Select Button
Selects highlighted item on the TV Screen

Info Button
Displays program information

DVR Button
To access DVR Events menu

Skip Back Button
Skips back 10 seconds in a program when using DVR functions

Recover Button
Allows easy recovery back to DISH Network programming and toggles through TV inputs

Swap Button
Used to swap Picture in Picture (It is only used when satellite receiver is in Single Mode)

Number Buttons
Used to enter channel numbers, navigating the Interactive Menus, and the letters in Search Menu

Star Button
Press to backspace without deleting while using the Search feature

Identifier Tab
Identifies the remote from TV1, TV2, IR, or UHF

Power Button(s)
Turn On/Off the selected mode and a separate quick TV Power button

VCR Mode Button
Press to control VCR functions

Aux Mode Button
Press to control Stereo, DVD etc.

Page Up/Down Button
Use to Page Up or Down in the Program Guide or in the Themes List

Guide Button
Displays the Program Guide and cycles through the Favorite Lists

Up Button
Channels up or Moves the cursor up

Right/Browse Button
Move cursor to the Right or opens the Browse Banner when in Satellite Mode

Cancel Button
Cancels the screen currently displayed

Down Button
Channels down or Moves the cursor down

View, View TV Button
View the Program Banner while watching programming

Skip Forward Button
Skips forward 30 seconds in a program when using DVR functions

Back, Stop, Pause, Play and Fwd Buttons
Functions DVR when in SAT mode, standard operation when in VCR mode

DISH Button
Will access the dish home Interactive TV menu

PIP Button
Used to display Picture in Picture (It is only used when satellite receiver is in Single Mode)

Position Button
Used to move the location of the PIP screen (It is only used when satellite receiver is in Single Mode)

Pound Button
Used in Sat Mode to display the Search screen

Used for 211/411

Used for 622