 


User's Guide
Indoor Siren
for IWATCHALARM
(Add-On)

Model: SM-005SR

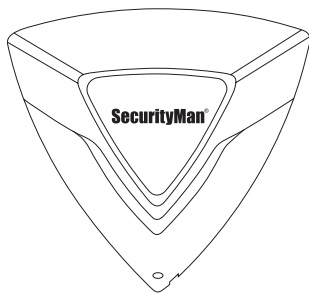

© Copyright 2016

This manual is furnished under license and may be used or copied only in accordance with the terms of such license. Except as permitted by such license, no part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or any means, electronic, mechanical, recording, or otherwise, including translation to another language or format, without the prior written permission of SecurityMan. The content of this manual is furnished for informational use only, is subject to change without notice, and should not be construed as a commitment by SecurityMan. SecurityMan Inc assumes no responsibility or liability for any errors or inaccuracies that may appear in this book.

FCC Information

Notes on FCC's "Consistent Statement of Information" This product meet the requirements specified in Part 15 of FCC Regulation. Operation rests with the following two conditions:

- (1) The equipment should not cause any harmful interference.
- (2) The equipment must receive and process any interference, including any possible interference caused by operation mistakes.

After testing the product, we confirm that the camera complies with the provision for class C digital equipment in the 15th part in FCC regulations; and the receiver complies with the limitations for class B digital equipment in Part 15 of FCC regulation. The product generates, applies and emits radio waves. It might cause harmful interferences to wireless communication if not be installed and used following the description of the manual.

The product may cause interference in residential area, and the customer should take remedies to eliminate the interference on their own costs.

If the product causes any harmful interference to wireless equipment or disturbs the receiving of TV signals (it can be identified by turning on and off the product), you can solve the trouble by following methods:

- Readjust the product or put it in another place.
- Extend the distance between the equipment interfered and the product.
- Refer to dealers or experienced radio electrician for help.

Warranty

SecurityMan Inc warrants that this product will be free from defects in title, materials and manufacturing workmanship for one year or otherwise specified on the product packaging. This limited warranty shall commence from the date of purchase. SecurityMan products warranty is not transferable and is limited to the original purchaser. If the product is found to be defective then, as your sole remedy and as the manufacturer's only obligation, SecurityMan will repair or replace the product. This warranty shall not apply to products that have been subjected to abuse, misuse, abnormal electrical or environmental conditions, normal wear and tear, or any condition other than what can be considered normal use.

Warranty Disclaimer

SecurityMan Inc, makes no other warranties, express, implied or otherwise, regarding this product, and specifically disclaims any warranty for merchantability or fitness for a particular purpose. The exclusion of implied warranties is not permitted in some states and the exclusions specified herein may not apply to you. This warranty provides you with specific legal rights. There may be other rights that you have which vary from state to state.

Limitation of Liability

The liability of SecurityMan Inc, arising from this warranty and sale shall be limited to a refund of the purchase price. In no event shall SecurityMan be liable for costs of procurement of substitute products or services, or for any lost profits, or for any consequential, incidental, direct or indirect damages, however caused and on any theory of liability, arising from this warranty and sale. These limitations shall apply notwithstanding any failure of essential purpose of any limited remedy.

Features

- Transmits up to 300ft clear line of sight
- Hi decibel alarm sound
- Tamper switch
- Flashing LED's

Specifications

 
- Power: DC 12V 1.5A
- Battery Compartment: Yes
(uses 3x AA batteries for backup only, not included)
- LED's: 4 (Red)
- Alarm decibels: 100dB
- Transmission Distance: 300ft clear line of sight
- Transmission Frequency: 433Mhz
- Size (LxWxH): 5.5" x 5.5" x 2.0"

Contents

- Indoor siren
- AC adapter
- Mounting accessories
- Users manual
(Battery not included)


Product Basics

NOTE: 3 AA batteries can be used for backup purposes. To insert, unplug the siren from the AC adapter and unscrew the 3 screws located at the bottom of the siren.

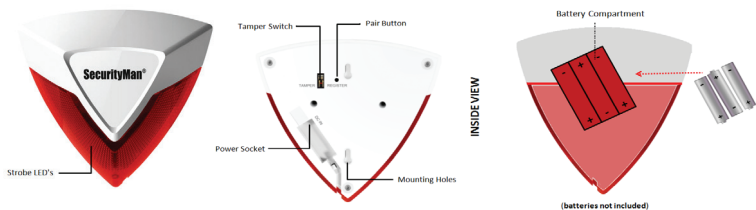

SETUP

 Insert the female end of the sirens AC adapter into the DC in port located behind the siren and the other end into a wall outlet closest to the alarm host. Make sure you place the siren face down leaving the pair button exposed.

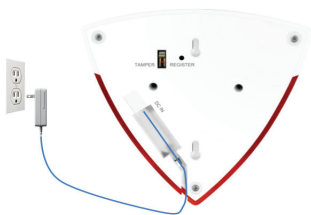


ADDING THE SENSOR TO THE APP



The **HOMEBOT** Smartphone app has a built in "user friendly" step-by-step interactive guide that you can follow when adding a device.

- Make sure you have the app installed on your Smartphone or tablet and that you have successfully added the alarm host to the app.
- Make sure the device(s) being added is no more than 2 feet from the host during the pairing process. You can place them in the desired location when completed.


 
When you are ready, launch the app and set it to the control center as shown below.

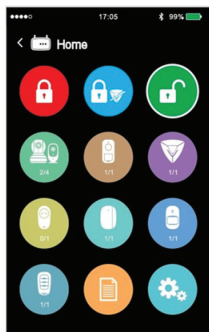

  
1. On the control center, tap on the **siren** icon and then tap on the + (**add**) symbol to begin adding the new device.

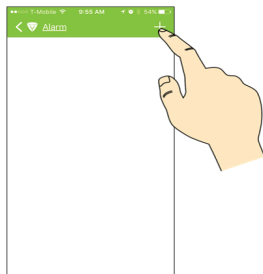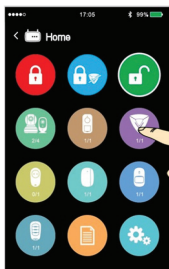

  2. **“Press and Hold”** the pair button on the back of the siren being added until the sensors Red LEDs begins to flash rapidly and then press **next** on the Smartphone prompt. Once your siren has been detected by the alarm host you will be given the opportunity to name (front door, living room, etc) the device prior to **saving** it. When done tap on the **Save** option.

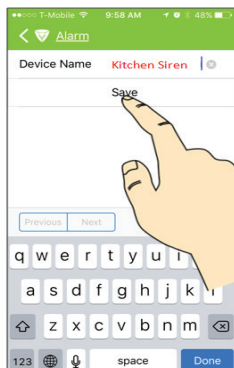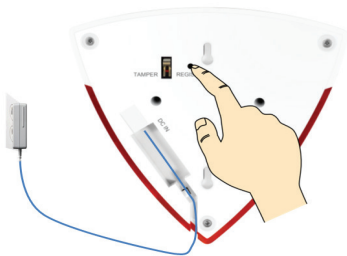


 3. Once the sensor has been successfully added to the host you may proceed to mounting it in the desired location.

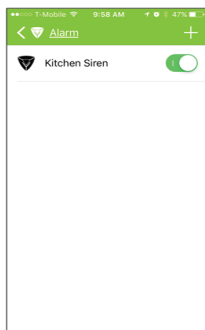

MOUNTING

 Using the anchor guidance provided, drill the mounting screws into the wall and then slide the sirens mounting holes over the screws.

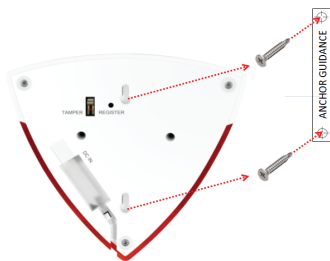

If you encounter any difficulty in the operation of this product after reading the manual, please feel free to contact us.

help you in any way we can.

We will be happy to answer your questions and