

TURBO FORCE® /TECH FORCE HIGH VELOCITY CIRCULATORS

HT-800 Series, HT-900 Series, HT-900C Series, HT-908 Series, HT-9004C and HF-910 Series

IMPORTANT SAFETY INSTRUCTIONS

READ AND SAVE THESE SAFETY INSTRUCTIONS BEFORE USING THIS FAN

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

FOR US MODELS ONLY - This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.

1. Use this fan only as described in this manual. Other use not recommended, may cause fire, electric shock or injury to persons.
2. This product is intended for household use **ONLY** and not for commercial, industrial or outdoor use.
3. To protect against electric shock, do not place fan in window, immerse unit, plug or cord in water or spray with liquids.
4. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of shock, this plug is intended to fit only one way in a polarized outlet. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. **DO NOT** attempt to defeat this safety feature.
5. Close supervision is necessary when any appliance is used by or near children.
6. Turn the fan to the **OFF** position and unplug the fan from the outlet when not in use, when moving the fan from one location to another and before cleaning.
7. To disconnect the fan, first turn control to the **OFF** position, grip the plug and pull it from the wall outlet. Never pull by the cord.
8. Do not operate the fan in the presence of explosive and/or flammable fumes.
9. Do not place the fan or any parts near an open flame, cooking or other heating appliance.
10. Do not operate the fan with a damaged cord or plug or if the product malfunctions, is dropped or damaged in any manner (see warranty).
11. Avoid contact with moving fan parts.
12. The use of attachments not recommended by the manufacturer may be hazardous.
13. Place the fan on a dry level surface.
14. Do not hang or mount fan on ceiling. HF-910 Series cannot be wall mounted.

15. Do not operate if the fan housing is removed or damaged.
16. A loose fit between the AC outlet (receptacle) and plug may cause overheating and a distortion of the plug. Contact a qualified electrician to replace loose or worn outlet.
17. Do not operate any fan with a damaged cord or plug. Discard any damaged fan, or return the fan to the retailer where the fan was purchased, or request a return authorization to return to Kaz, Inc. for examination and/or repair.
18. Do not run fan cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic areas and where it will not be tripped over.

WARNING: To Reduce The Risk of Fire or Electric Shock, Do Not Use This Fan With Any Solid State Speed Control Device

FUSED SAFETY PLUG - FOR US MODELS ONLY

This fan features a fused safety plug which is designed to cut off electric current to the fan if an electrical fault occurs. Please see below for more information on how to properly use your fan and replace the safety plug fuse, if needed.

USER SERVICING INSTRUCTIONS

1. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
2. If your fan loses power and you suspect that the fuse on your fan has blown, you should first remove the spare fuse holder attached to the cord plug (Fig. 1). Remove the spare fuse from the plastic spare fuse holder, and set the spare fuse aside (Fig. 2).
3. You can gain access to the blown fuse by sliding open the door found on the side of the plug. Slide the door outward until the blown fuse is fully visible (Fig. 3).
4. Remove the blown fuse and snap the replacement fuse into place. Risk of fire. Replace fuse only with 2.5 Amp, 125 volt fuse (provided with product). Fully close the fuse door by sliding back into place. Discard the blown fuse. The plug should now be ready for normal use.
5. Risk of fire. Do not replace attachment plug. Contains a safety device (fuse, AFCI, LCDI) that should not be removed. Discard product if the attachment plug is damaged.
6. If you need further information on how or when to replace the fuse in the safety plug, please contact Solid Signal at 877.312.4547.

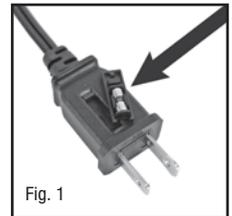


Fig. 1



Fig. 2

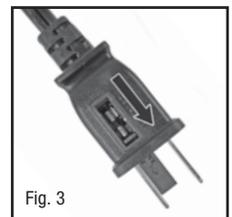


Fig. 3

INTRODUCTION

The Turbo Force® High Velocity Air Circulator Fans are aerodynamically designed to give you the versatility of changing this fan's angular direction simply by adjusting the fan to ANY desired angular output (Fig.1). Upon using this fan, you will feel a strong and powerful air stream that will quickly move air to provide a cooling effect.



**TURBO
FORCE
POWER**

**FOR ENERGY
SAVINGS ALL YEAR**

**TECH
FORCE
POWER**

Honeywell Air Circulator Fans can help save energy and can lower monthly utility bills all year round. Our air circulators increase distribution of cooler air from your air conditioner or warmer air from your heating system creating a vortex of air flow for increased comfort. Increased air flow allows the air conditioning and heating systems to be used at lower settings to help save you money.




**Lower Your
Energy Bills!**

In the summer:

Circulate cool air by using with window or central air conditioning.

Circulate cool air upstairs.

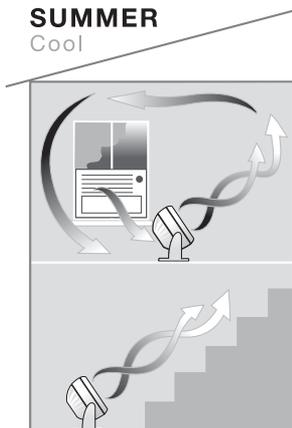

WINTER



Warm

In the winter: Circulate warm air. Position your air circulator in an open location for upward air movement. Run it on a low setting to move the hotter air from the ceiling and circulate the warmer air throughout the room.

Increase Heating Source Efficiency: Use with other heat sources, such as wood stoves, baseboard heaters, and or vents to help circulate the warm air throughout the room.

OPERATION

- Be sure the fan is in the OFF position.
- Place your fan on a dry, level surface.
- Plug the power cord into a polarized 120 volt AC wall outlet.
- To operate, turn the control knob to the desired fan speed: HIGH (III), MEDIUM (II) or LOW (I) (Fig. 2).
- Adjust the fan to the desired angular air output direction.
- To move the fan, turn the fan OFF and pick it up by the concealed handle that is located on the outside rim of the fan (Fig. 3).

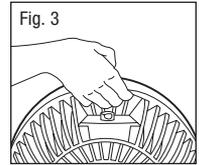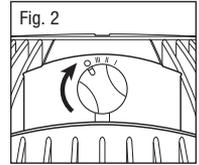

WALL MOUNTING (HT-800 Series and HT-900 Series Only)

- Locate and mark the position on the wall where the fan will be mounted (preferably at a wall stud).
- Insert two screws into the wall stud. (Screws are not included and can be purchased at a hardware store)
- Use #8, 1" length screws, leave 3/8" below screw head (bolt) exposed from the wall.
- Line up the openings on the base of the fan with the screws (bolts) and hang the fan on the wall.

NOTE: HF-910 Series cannot be wall-mounted.

USER SERVICING INSTRUCTIONS

CLEANING AND STORAGE

- Turn the fan off and unplug it before cleaning.
- Use only a soft cloth or cotton swab to gently wipe the fan clean.
- To clean between the grilles, we recommend using a pipe cleaner, vacuum cleaner, flexible dustwand or compressed air to gently remove the dust.
- DO NOT immerse the fan in water and never allow water to drip into the motor housing.
- DO NOT use gasoline, paint thinner or other chemicals to clean the fan.

REMOVAL OF THE FRONT GRILLE FOR CLEANING

Only model HT-908 has a removable grille.



DO NOT remove the fan grille unless the fan's power is turned off and the power cord is unplugged.

- Gently lay the fan face down on a table (Fig. 4).
- Remove the front grille by unscrewing the screws located on the back of the fan using a standard phillips head screw driver (⊗).

NOTE: The screws will remain attached to the rear housing to ensure they are not lost. Do not try to force the removal of the screws.

- Lift the rear housing by the handle to separate from the front grille.
- Re-assemble the fan by replacing the front grille and aligning the screw holes between the front grille and the fan body. Gently tighten the screws.
- For storage, clean the fan carefully as instructed. Store the fan in the original packaging or cover the product to protect it from dust.



Fig. 4

CONSUMER RELATIONS

Call us toll-free at: 1-877-312-4547
email us at info@solidsignal.com
or visit solidsignal.com for live chat

NOTE: IF YOU EXPERIENCE A PROBLEM, PLEASE CONTACT CONSUMER RELATIONS FIRST OR SEE YOUR WARRANTY. DO NOT RETURN TO THE ORIGINAL PLACE OF PURCHASE. DO NOT ATTEMPT TO OPEN THE MOTOR HOUSING YOURSELF, DOING SO MAY VOID YOUR WARRANTY AND CAUSE DAMAGE TO THE FAN OR PERSONAL INJURY.

1 YEAR LIMITED WARRANTY

You should first read all instructions before attempting to use this product.

- A.** This 1 year limited warranty applies to repair or replacement of product found to be defective in material or workmanship. This warranty does not apply to damage resulting from commercial, abusive, unreasonable use or supplemental damage. Defects that are the result of normal wear and tear will not be considered manufacturing defects under this warranty.

Kaz, Inc. IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you also may have other rights which vary from jurisdiction to jurisdiction. This warranty applies only to the original purchaser of this product from the original date of purchase.

- B.** This warranty does not cover damage resulting from any unauthorized attempts to repair or from any use not in accordance with the instruction manual.

- C.** Return defective product to Kaz, Inc. with a brief description of the problem. Include proof of purchase and a \$10 US/\$15.50 CAN check or money order for handling, return packing and shipping charges. Please include your name, address and a daytime phone number.

You must prepay shipping charges. We suggest having tracking or delivery confirmation.

Send to:

In U.S.A.:

Kaz, Inc.
Attn: Returns Department
4755 Southpoint Drive
Memphis, TN 38118
USA

In Canada:

Kaz Canada, Inc.
Attn: Returns Department
510 Bronte Street South
Milton, ON L9T 2X6
Canada

