



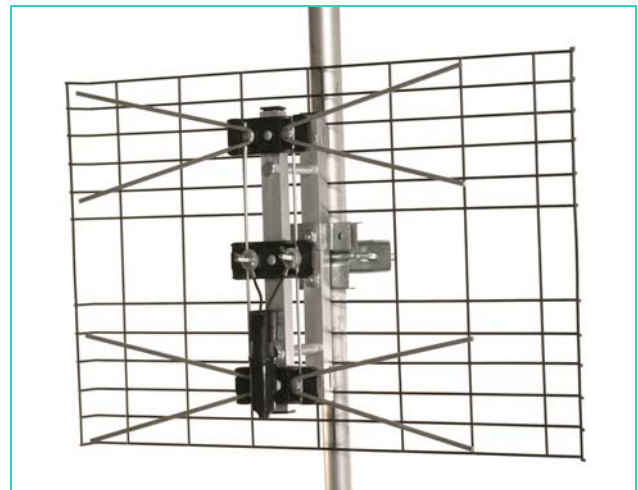

DB2 Assembly Instructions

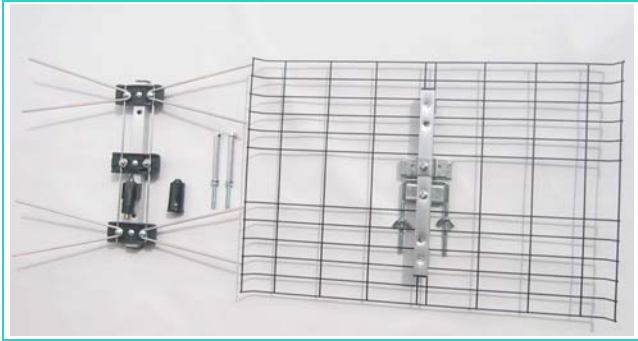

The DB2 comes with:

- 1 set of reflectors
- 1 set of 2 elements with transformer and weather boot.
- 2 sets of 4" bolts with aluminum sleeves,
- 1 Mast clamp

Attach the reflector panel to the elements using the supplied bolts.

As shown in this side view- *left*

Feed bolts through the holes on the square tube and slide the aluminum spacers over the bolts. *(as shown)*

Assembled DB2, *right*:

- Make sure elements (bowties) are facing transmitting towers.
- Tip: If your cable run is greater than 75', A UHF pre-amplifier may be required.
- UHF signals are line of sight. Get as much elevation on the antenna as practical.
- Attic Installations will cut 40% -50% of your signal strength.

Questions problems? Call Terrestrial Digital toll free: 877-825-5572