

Adapt-IQ Digital Signage Tablets 7", 10.1" & 15.6"

Model: MCT-70QDS / MCT-70QDS-POE / MCT-10QDS / MCT-10QDS-POE / MCT-10HPQ / MCT-10HPQ-POE / MCT-156QDS / MCT-156QDS-POE / MCT-156HPQ / MCT-156HPQ-POE



*Desktop background will vary depending on the Android version installed.

Please keep this quick start guide for future reference.

Table of Contents

	Page
INTRODUCTION.....	2
SAFETY PRECAUTIONS.....	2
FRONT, BACK AND SIDE VIEWS OF MIMO ADAPT-IQ.....	3
TURNING ON THE MIMO ADAPT-IQ.....	4

1. INTRODUCTION

The Mimo Adapt-IQ is not a conventional consumer tablet. It is an advanced tablet thoughtfully engineered for 24/7 commercial use. Our tablets are the best Android solution for demanding applications, including retail, transportation, room control, hospitality, healthcare, and education. The rugged hardware is designed and tested for 24/7 use and includes added features such as VESA mounting, SD card protection system, tempered glass multi-touch panel, stereo audio output, and a robust case. The Adapt-IQ is a versatile device with wireless Ethernet connectivity or the option of secure power over Ethernet (PoE). For fixed applications where battery power is not required and a rugged, mountable Android tablet is desired, the Adapt-IQ is the ideal device.

Main Features:

- 3-year warranty
- Integrated Smart Lockdown Software, MLock
- Android 4.4, 5.1 or 6.0 Lollipop OS, license free
- ARM Cortex-A9 CPU for 4.4 and 5.1
- ARM Cortex-A17 CPU for Android 6.0
- 10-point touch, projected capacitive, 5-point on 7"
- 8GB eMMC Flash
- 2GM DDR3 RAM
- 10/100 Ethernet
- Bluetooth 4.0
- 802.1x WiFi
- 75mm x 75mm VESA mounting holes
- USB 2.0
- Lockable SD card slot
- +, -, Up, Down, Menu/Enter
- Body and cover are black ABS & PC

2. SAFETY PRECAUTIONS

Mimo Adapt-IQ tablets are designed for indoor use only.

To reduce the risk of fires or electrical shock, do not expose the Mimo Adapt-IQ directly to rain or water.

Do not block the ventilations holes in the back of the tablet at any time.

Do not subject the Mimo Adapt-IQ to severe impact.

Do not allow any foreign matter to enter external connection points and slots.

Do not open the case of the tablet at any time. There is a risk of electrical shock and there are no serviceable parts inside. Opening the case will void the warranty.

2. FRONT, BACK, AND BOTTOM VIEW OF TABLET

FRONT



BACK



TOP - BACK



Case Outlook

TOP - BACK

1. SD card slot + cover
2. Menu/Enter button
3. Function keys (up/down)
4. Function keys (Vol+ / Vol-)

BOTTOM - BACK



BOTTOM - BACK

5. Ethernet RJ45 port
6. USB type A
7. Micro USB
8. Add on Module Slot
9. DC in
10. Power switch

SIDE RIGHT - with audio jack




SIDE RIGHT

11. Audio Jack

1. TURNING ON THE MIMO ADAPT-IQ

Ensure the power adapter is connected to the DC input jack on the back of the Mimo Adapt-IQ. Plug the power adapter into a standard electrical outlet. For -POE versions, ensure the Ethernet cable is plugged in as the power adapter is not used. Turn on the power switch on the back side, to the right of the DC input jack. The Mimo Adapt-IQ is preconfigured to automatically start either any APK or the MLock software once turned on, depending on the factory configuration. Also, depending on the configuration, when powering up the Mimo Adapt-IQ tablet one of the three screens will appear.

Power up welcome screen for first time power up only with Android 4.4 loaded.

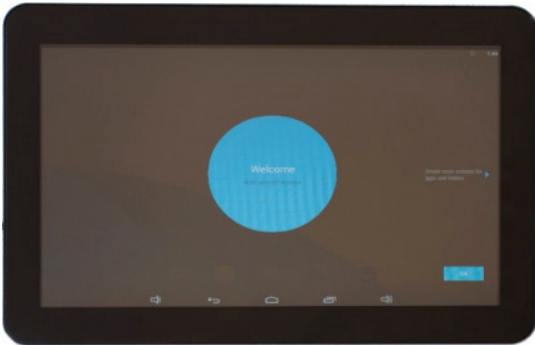

Power up home page Android home page 4.4



Power up home page Android 5.1 and 6.

