



45411

Personal Security
**Water Leak
Alarm**
User's Manual

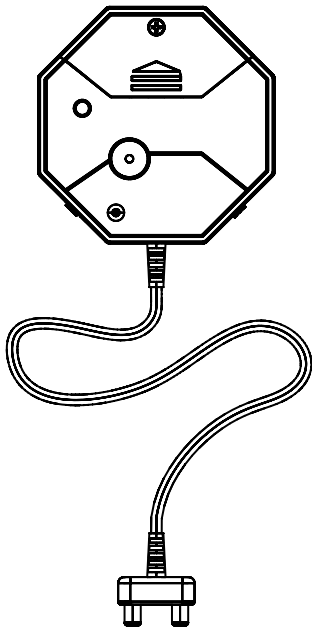


Table of Contents

Important Safeguards	4
Introduction	4
Installing Batteries	5
Low Battery Indication	5
Installation	6
Warnings	9-10
Specifications	8
Warning	9

Before connecting or operating the Water Leak Alarm, please read these instructions carefully and save this manual for future reference.


This user manual explains in simple steps how to install, use and care for your new Personal Security Water Leak Alarm.

If you have any questions or would like additional information please visit our web site www.jascoproducts.com or contact our Technical Support Group at 1-800-654-8483, option 4.

Important safeguards

Pre cautions

1. Do not attempt to disassemble the Water Leak Alarm, unless described in the user's manual. There are no user serviceable parts.
2. Handle with Care – Avoid striking or shaking. Improper use or storage could damage the Water Leak Alarm. Modifying the device or its internal components can cause a malfunction and void the Alarm's warranty.
3. If you feel the Water Leak Alarm is not operating correctly or as described, please contact Technical Support for assistance **(1-800-654-8483), option 4.**

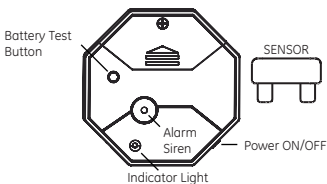

Introduction

The Water Leak Alarm is designed to be used in areas where there is a potential for damaging water leaks – dishwashers, washing machines, hot water tanks, bathrooms, air conditioner condensation drip pans, etc. When mounted properly it will sound an alarm indicating potential damage from water leaks.


Installing Batteries

The alarm requires (4) LR44 (or 357) button batteries (included). Average battery life for typical usage is up to one year.

1. Make sure alarm ON/OFF switch is set to "OFF" position.
2. Remove the screw securing the battery compartment cover.
3. Slide cover off the battery compartment door in direction of arrow.
4. Insert (4) LR44 button batteries noting polarity.
5. Replace battery compartment cover.
6. Secure the battery cover screw.

Low Battery Indicator

GE Personal Security Water Leak Alarm has a battery test button. Battery levels can be checked in either ON or OFF mode. Once pressed, the light on front of the alarm will turn red indicating that the battery is good. If the battery test light fails to turn red, replace all batteries.

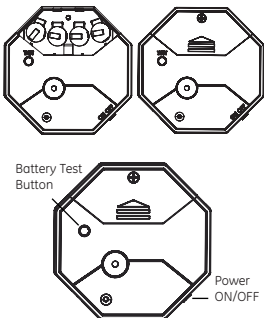


Installation

The sensor should be mounted first. Position the sensor with the contacts pointing down. Find a suitable location where water could accumulate if a leak were to occur (e.g. along the baseboard of wall).

For best results mount both alarm and sensor to a flat surface. The surface must be smooth and nonporous. Before mounting, make sure the mounting surface is clean and dry. Clean the mounting surface with a mixture of 50% Isopropyl alcohol and 50% water. Remove protective paper from double-sided tape. Once the mounting surface is ready, position sensor so that the metal contacts are pointing down, touching the floor or the area where it can detect water accumulation.

Note: If mounting the sensor to a metal surface, ensure the sensor's contacts do not touch the metal surface.

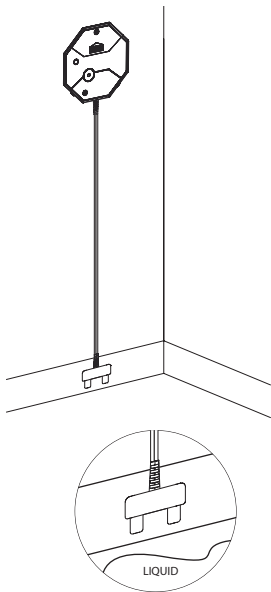

Next, stretch the cable vertically and locate a suitable position with a smooth surface to mount the alarm. Make sure you can easily access all the controls and the battery door once the position has been selected. Follow the same mounting instructions above for mounting the alarm. Position the back of the alarm unit (after removing protective paper from the double side tape) up against the smooth nonporous surface. Apply pressure to secure the alarm unit to the surface.

Specification:

Power Supply: 4 LR44 Batteries

Operating Voltage: 4~6V DC

Operating Current: <40mA (6V DC)

Standby Current: <10uA (6V DC)

Alarm Sound Period: Continuous

Alarm Sound-Level:

Hi>110 dB (6.0V DC)

Low>95 dB (6.0V DC)

(Measured at 30cm)

Low Battery Voltage-Level Indicator: 4~4.7V DC

(Testing Button)

Battery Good: Red LED lights up

Battery Voltage-Level Low: Red LED does not light up

Operating Temperature: 0°F~40°F

WARNING

Limitations of Alarm Products

This product should be tested periodically to make sure it is working properly. The product, if used properly, may reduce the risk of burglary, robbery, or other adverse events. However, JASCO is not an insurer, this product is neither insurance nor a guarantee that such an event will be prevented, and users should protect themselves with proper insurance. JASCO makes no representation that this product cannot be compromised or circumvented, that it will provide an adequate warning, or that it will prevent any personal injuries, property damage, or other losses. Like any alarm product, including expensive commercial systems, it may be bypassed, it is subject to compromise, and it may fail to warn for a variety of reasons, including, but not limited to: improper installation or positioning; improper maintenance; tampering; dead or improperly installed batteries; sensing limitations; component failures; receivers; intrusions may be outside of a product's designed range and certain environmental conditions may impact performance and audible alarm signals may be outside of hearing range, muted by doors, walls, and floors, unheard by deep sleepers or the hearing-impaired, or overwhelmed by other sounds.

WARNING*Risk of personal injury*

- Prolonged exposure to alarm siren may cause permanent hearing loss

Battery Warning

- Remove batteries if the Alarm will not be used for extended periods
- Batteries may leak harmful liquids or ignitable materials or explode causing injury and product damage
- Do not mix old and new or other battery types
- Replace all batteries at the same time
- Replace fully discharged batteries immediately.

For indoor use only; do not use in wet locations.

This Jasco product comes with a 90 day limited warranty. Please contact Technical Support at 800-654-8483 option 4 between 7:30 AM—5:00 PM CST or via our website (www.jascoproducts.com) if the unit should prove defective within the warranty period.

GE is a trademark of the General Electric Company and is used under license to Jasco Products Company LLC, 10 E. Memorial Road, Oklahoma City, OK 73114.